MiFa

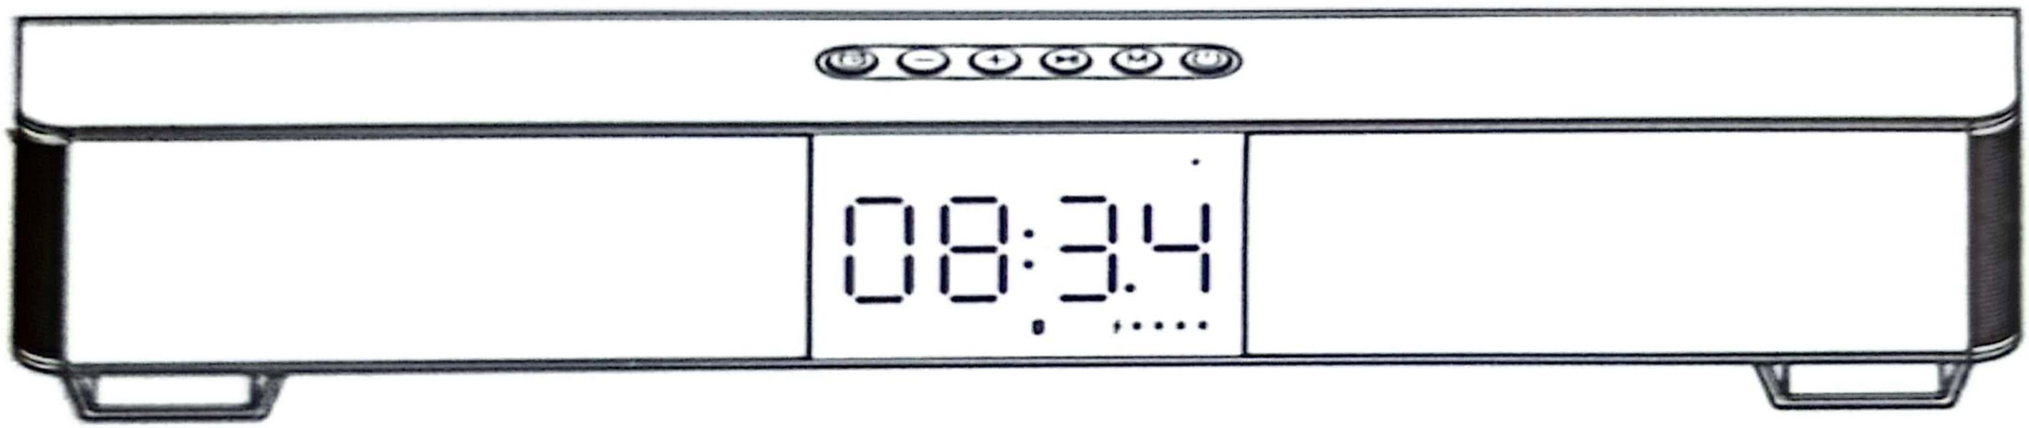

K3 电视音响
SoundBAR

使用说明书
USER MANUAL

02 Packing details

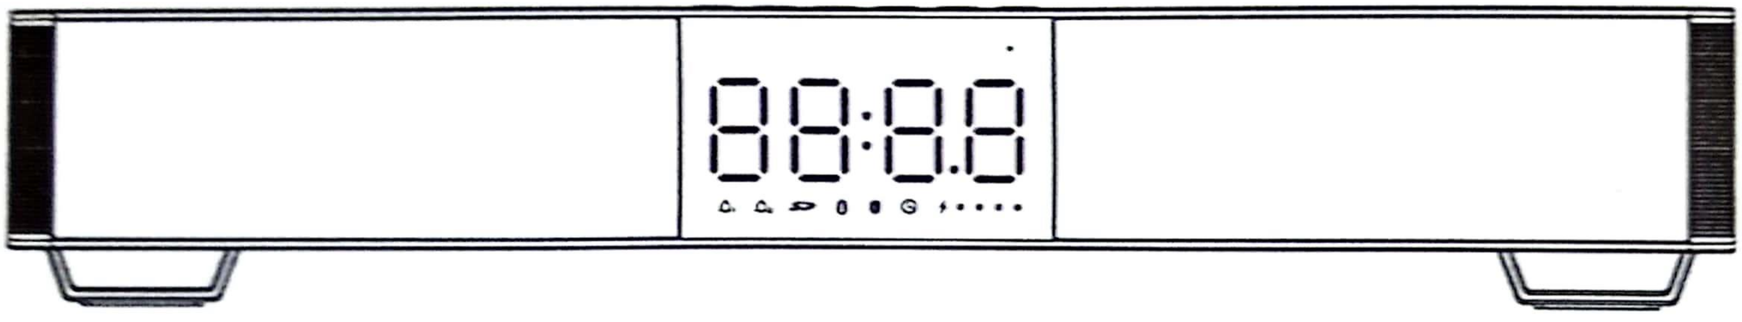

Soundbar*1pc

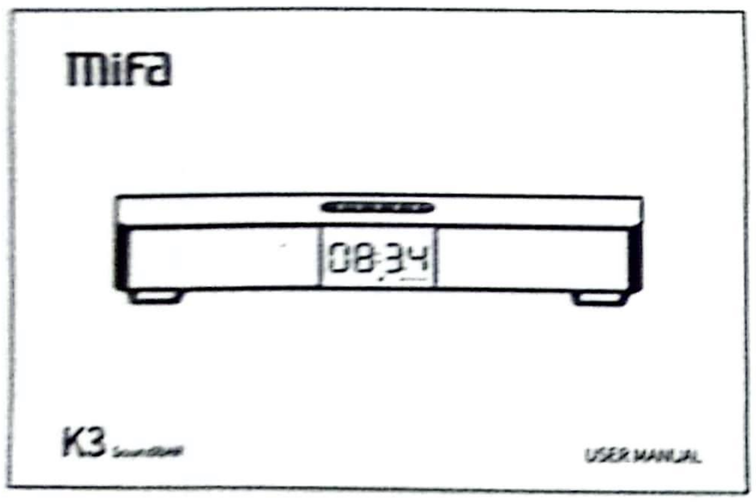

User Manual*1pc

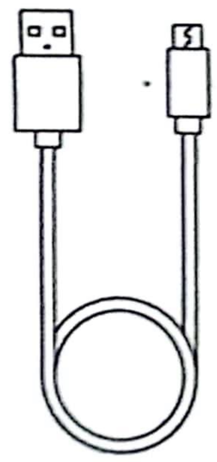

USB charging cable*1pc

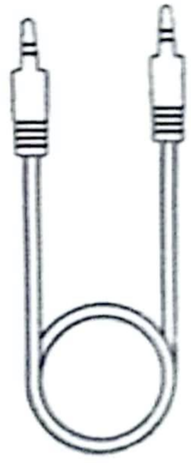

3. 5mm audio cable*1pc

03 Keys functions

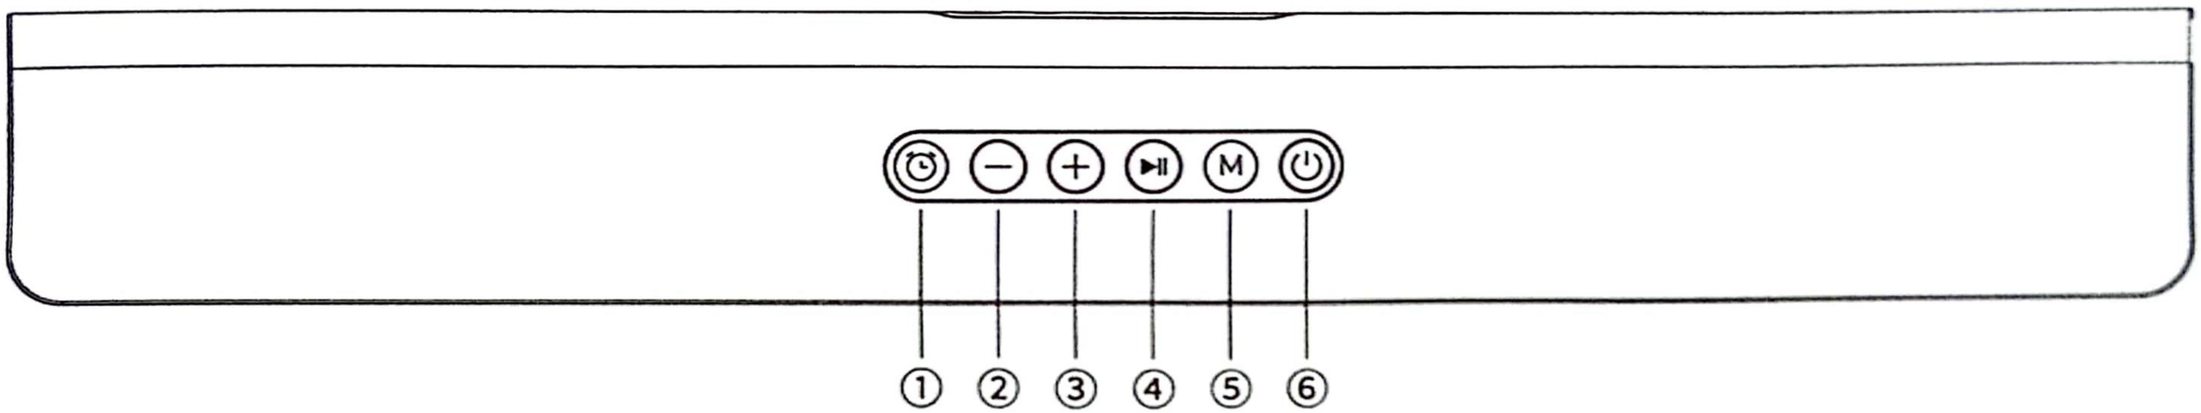

①Clock button:
Short press: Select clock/alarm 1/alarm 2.
When entering the alarm setting, press the clock key to confirm and switch the hour and minute.
Long Press: Enter clock/alarm 1/alarm 2 settings
In other modes: Short press to view clock/alarm 1/alarm 2

Snooze function: When the alarm turns on, if nothing done, automatically execute greedy sleep function three times, each time will ring 5 minutes, 5 minutes later,ring for the next time, snooze alarm turns off after ring three times.
When the alarm turns on, press any key(except the clock key)to sleep for 5 minutes,then snooze function turn off.Double click the clock button to stop the snooze alarm.

②Volume - button:
Short press for volume reduction, a total of 30 levels;
Long press for the previous track.
FM Mode: long press to switch to previous station

③Volume + button:
Short press for volume inerease, a total of 30 levels; Long press for next song
FM Mode: short press to switch to next station

④Play / pause button / phone button / Bluetooth button
Usually press for pause and play; For incall, short press to answer, long press to reject. During a call, short press to hang up.
If Bluetooth disconnected, press to reconnect the last Bluetooth device.
Press and hold to unpair Bluetooth. Double click to enter TWS pairing if Bluetooth is not connected
FM Mode: Long press for automatic search station ,short press to set up mute or cancel mute

⑤Mode button:
Short press: Bluetooth > FM> AUX > TF > USB >Clock

⑥power button:
Press 2S to power on/off.
Short press for three levels of brightness adjustment.
Default medium (dark> medium>bright)
Press and hold for 8s to reset and then power off.

04 Ports functions

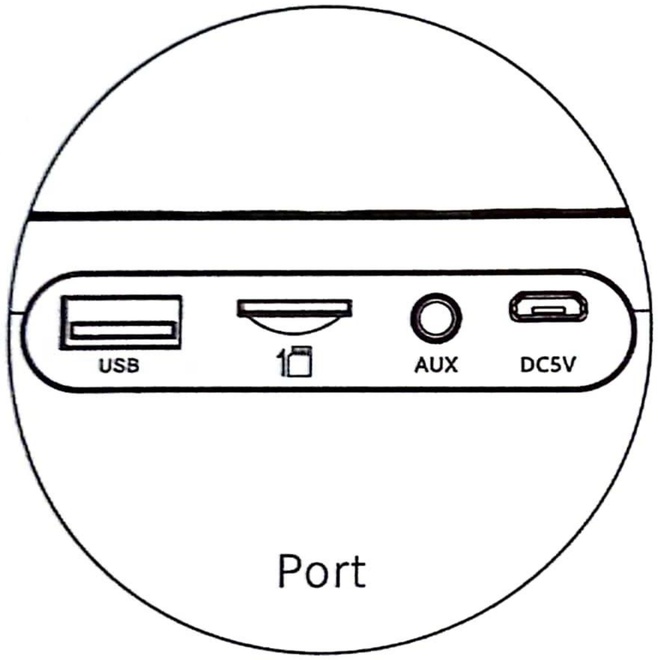

Port

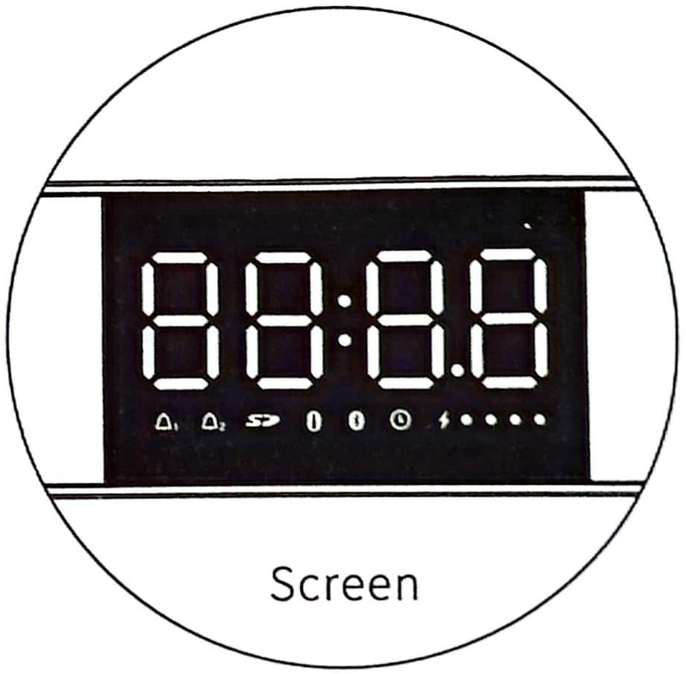

Screen

Micro SD play
If the speaker turned on and the Micro SD card inserted. There is a prompt tone and the SD icon is displayed. The speaker will automatically play the music files in the Micro SD card.

USB flash drive play
If speaker turned on and USB flash drive inserted. There is a prompt tone. After the USB mode is displayed, the speaker will automatically play the music files in the U disk.

AUX input
Connect the audio cable, there is a tone, and the external input icon is displayed. The speaker automatically switches to the AUX-in mode.

Charging
Connect a USB power adapter of DC5V~1.5A or above, or charge by the USB port of the computer.
1. Can play music while charging
2. LED indicator mode (running light when charging, keep on if full charged)

05 Bluetooth connection

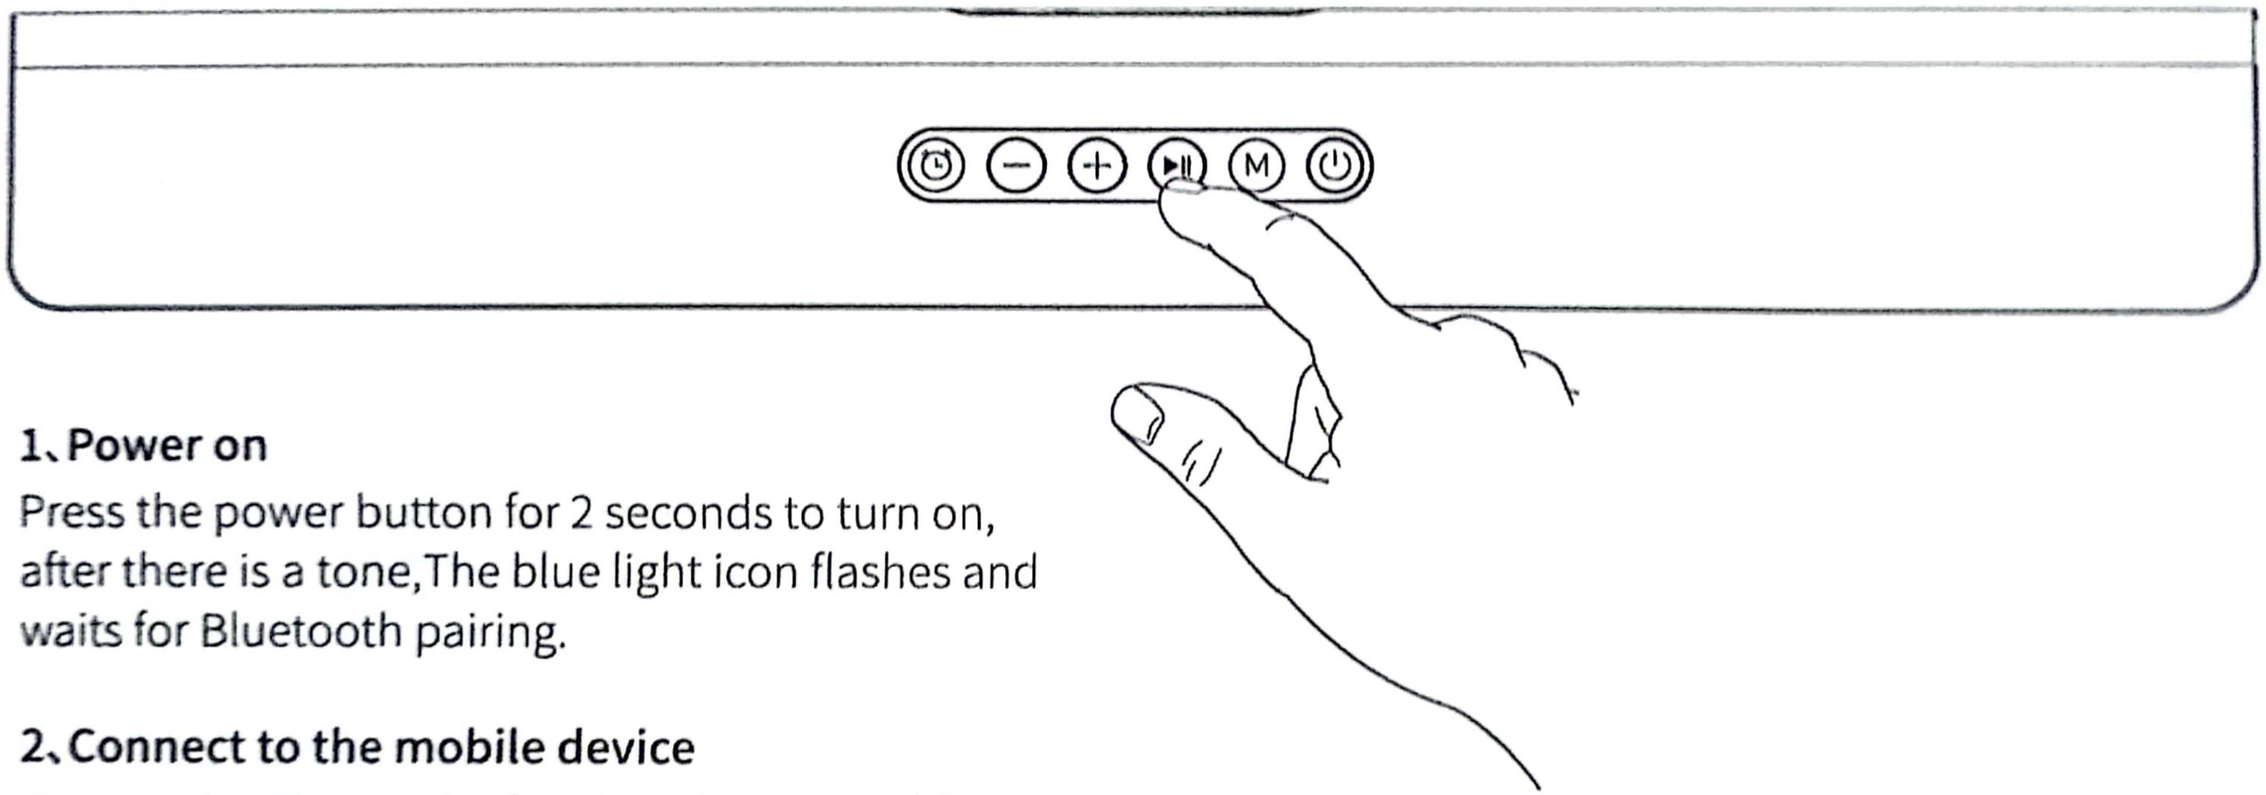

1、Power on

Press the power button for 2 seconds to turn on, after there is a tone,The blue light icon flashes and waits for Bluetooth pairing.

2、Connect to the mobile device

Turn on the Bluetooth of mobile devices and find Mifa_K3 in the list of Bluetooth devices.
When the connection is successful, you will hear a tone and the Bluetooth icon will keep on.
In subsequent use, as long as the Bluetooth of the mobile device is turned on, it can automatically connect.

Other instructions:

To connect to other Bluetooth devices, press and hold the play pause button to disconnect with current Bluetooth device, and Bluetooth returns to the waiting status. To reconnect, short press the play pause button.

06 True Wireless Stereo (TWS)Function

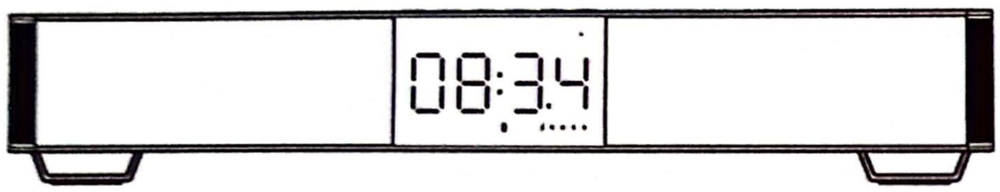

Speaker 1

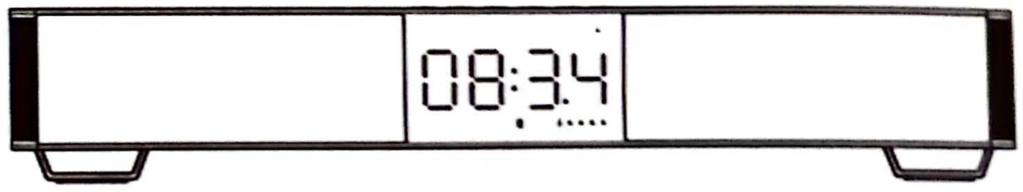

Speaker 2

1.Set up the TWS system

Turn on two K3 speakers and make sure neither of them is paired with any mobile device. Double press either speaker on the “play/pause” button. It issues a sound and the speaker begins to connect with the other. After a prompt tone, the TWS system is set up successfully.

2.Connect two speakers to a Bluetooth device

Activate the Bluetooth of your device and search for Mifa_K3, select it from the list. When the connection is successful, you will hear a tone and the Bluetooth icon will keep on.

3.Disconnect the TWS

To disconnect the TWS paired speakers,just double click either speaker's "play/pause"button.

Other instructions:

01. For the first time, if two speakers need TWS connection. Double-click the play pause button to enter TWS connection. After the connection is successful, the Bluetooth icon from the slave speaker is always on, from the main speaker flashes quickly.
02. If two speakers connected by TWS, they will automatically connect after the next boot.
03. If the TWS connection is successful, the Bluetooth icon from the slave speaker is always on, The Bluetooth icon of main speaker indicates the status of play, pause, and Bluetooth connection to the phone.
04. After the TWS connection is successful, operate any button of the two speakers, The other synchronizes accordingly.

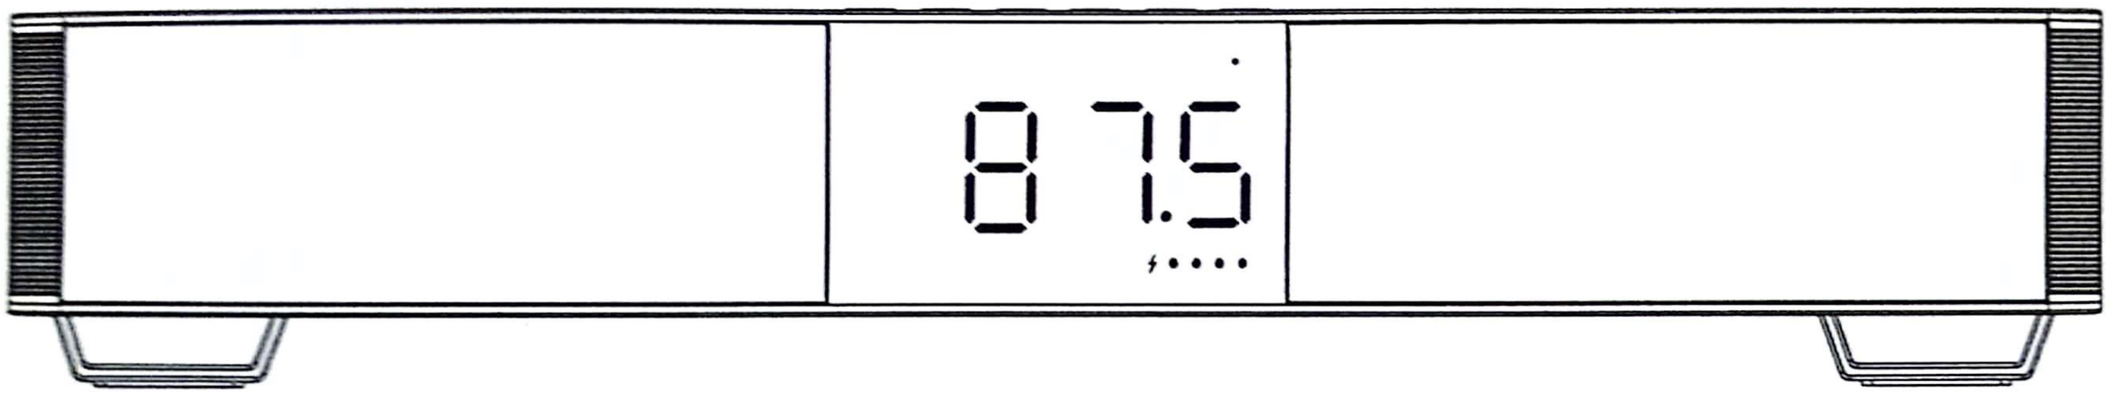

Enter FM mode

Power on speaker , short press" M "to switch to FM mode

In the process of playing

Short press " ▶II "to mute FM , press again to resume FM play

Long press" ▶II " to automatic search station and save

Long press " — "or " + "to select saved previous station or previous station play

08 Specifications

Basic parameters	
Speaker type	Bluetooth speaker
Storage type	Up to 32 GB Micro SD card/flash drive
Power supply	Built-in 2200 mAh Lithium battery
	Charge time about 3 hrs by DC 5V~1A and above
Technical Parameters	
Loudspeaker	45mm internal magnetic speaker*2 pcs +4070 radiators*2 pcs
Volume adjust	Buttons
Volume levels	30 grades
Output	10W THD≤3%
Frequency response	70Hz-18KHz
Wireless connection	Bluetooth 5.0
USB version	USB2.0, compatible with USB1.1
Media support	MP3、WMA、WAV、APE、FLAC
File support	MP3:8Kbps-320Kbps WMA:5Kbps-384Kbps WAV:32Kbps-1200Kbps APE:100Kbps-1200Kbps FLAC:100Kbps-1200Kbps

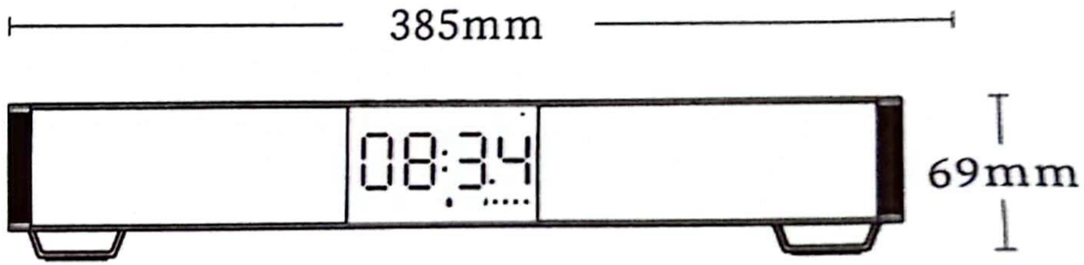

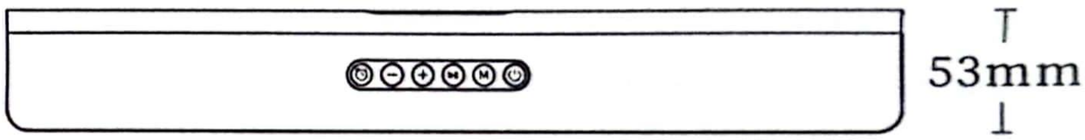

Product size::385×53×69mm
Product Weight:580±5g(battery included)

09 FAQ

FAQ	Solutions
Not able to connect to device	1.Restart the speaker and try again
	2.If your device requires Pin code, please enter 0000
Keeps cutting out when play	Please ensure the speaker is within the operating range and there is no obstacle between the speaker and the device
Not able to play the music in Mirco SD card	1.Please ensure the format of the Micro SD card is FAT32
	2.Please ensure the formats of the music files are MP3、WMA、WAV、APE、FLAC
No sound when playing	1.Please adjust the volume of the speaker
	2.Check if the speaker is paused or mute
No able to turn on	Please try to charge the speaker
No sound in AUX-In mode	1.Check if the audio cable is well connected
	2.Check if audio cable port is damaged
Not play with USB flash drive	1.Check if the speaker is in USB play mode
	2.Check if USB flash drive damaged

MIFA INNOVATIONS LLC
www.mifa.net Designed in US Made in China

Copyright © MIFA. All rights reserved.
MIFA, the MIFA logo and other MIFA marks are all owned and registered by MIFA INNOVATIONS LLC. All other trademarks are the property of their respective owners. The information contained here is subject to change without prior notice.

JUST ENJOY

MIFA INNOVATIONS LLC
www.mifa.net Designed in US Made in China

Copyright © MIFA. All rights reserved.
MIFA, the MIFA logo and other MIFA marks are all owned and registered by MIFA INNOVATIONS LLC. All other trademarks are the property of their respective owners. The information contained here is subject to change without prior notice.